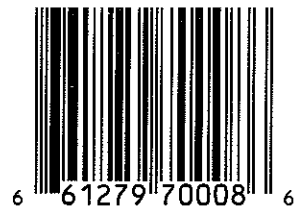

1 x 6-8' Barn Grey Shiplap

WOOD PANELING INSTALLATION

When installing both in horizontal and vertical applications, nail directly to the wall frame. Vertical applications will need furring strips 24" on center.

Do not nail through overlapping pieces

Interior walls that contain materials such as plaster, concrete or textured drywall, should be dry before paneling is installed. Waterproofing masonry or concrete walls should be done prior to the installation of the paneling.

Variances in temperature between the storage and application areas have a negative effect on the quality of the finished appearance if the product is not allowed to adjust to room temperature prior to installation.

When installing paneling over plaster or hardboard, the walls need to be in moderately good condition. Construction adhesive is usually the easiest and fastest way to install wood paneling over drywall, plaster, hardboard, and even old paneling. When applying adhesive, be sure to follow the manufacturer's instructions. To make sure you have a tight joint when applying adhesive, use small nails to tack up and hold the paneling in place on the drywall or plaster while the adhesive sets. Apply tack nails every two or three feet.

To touch up Windswept® Barn Grey

BRAND: Behr Base 5077 **8oz**

CLRNT	BL	CL	KXL	LL
OZ	0	0	0	0
384th	13	1	24.5	26

BRAND: Behr Base5077 **Gallon**

CLRNT	BL	CL	KXL	LL
OZ	0	0	1	1
384th	208	16	8	32

BACK